

LT Terraneo PH620WS



Terminals

- 1 0V DC
- 2 Output Aux Sounder 40.50N
- 4 Audio & Door Release
- 5 Not Used

IMPORTANT NOTE :

1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).


2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

Art. PH620WS - Intercom

Intercom for use in electric "Porter" installations with 1 wire + n and with one or more external units.

Available finish: white

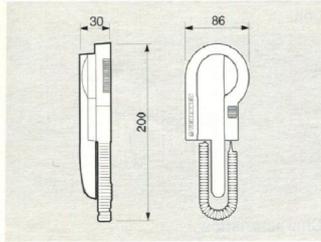


Characteristics

- Pushbutton for door opening control.
- Equipped to receive electronic call signal.
- Electret microphone.
- Weight Kg. 0.200

Connection terminals and associated functions

- 1 0V DC
- 2 output for auxiliary sounder art. 40.50N
- 4 audio signal and electric door lock control signal
- 5 do not connect

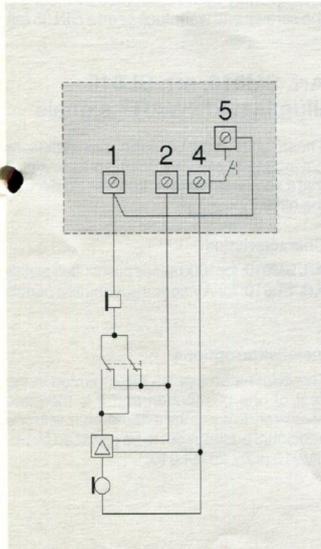

www.intercomsrus.com


Art. 40.50N

Electronic auxiliary sounder

This unit allows for distribution of the call tone to other areas of the same dwelling.


Characteristics

Electronic call signal differentiated according to external unit and floor.

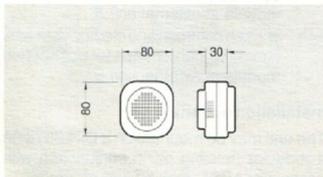

Connection terminals and associated functions

- 7 Do not connect
- 17 Do not connect
- 8 Do not connect
- 18 Input for single tone or dual tone call signal
- 0 0V loudspeaker
- 3 Do not connect
- 11 Do not connect
- 13 Do not connect

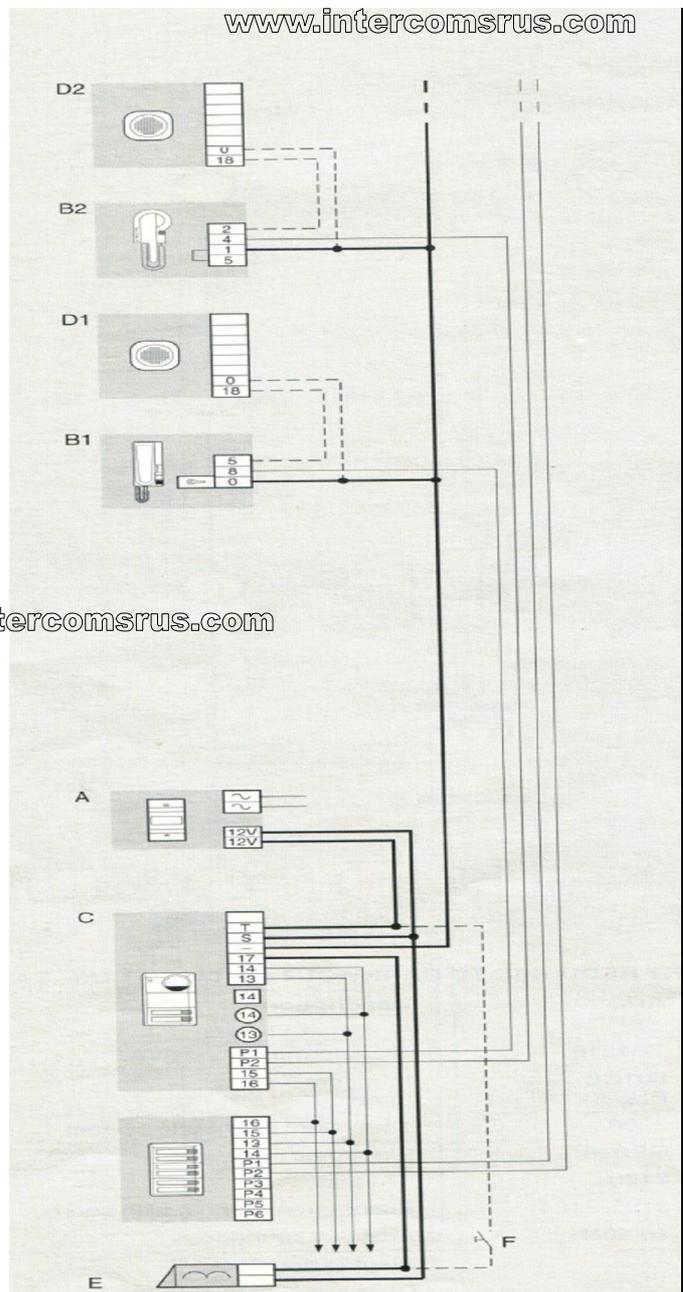

www.intercomsrus.com