


Touch Sensitive code lock 22PS (812S/WP)

The 22PS is a self contained codelock capable of accepting up to 9 unique codes from 4-8 digits in length. The output is via a dry contact change over relay which can be programmed to activate from 01-99 seconds or latch by entering a relay time of '00' during programming. (Note: When using the relay latching facility, to activate the relay enter the access code followed by 'E' and to de-activate the relay enter the access code followed by 'C'). The codelock will operate from 12V to 24V AC or DC and includes a push to exit button input.

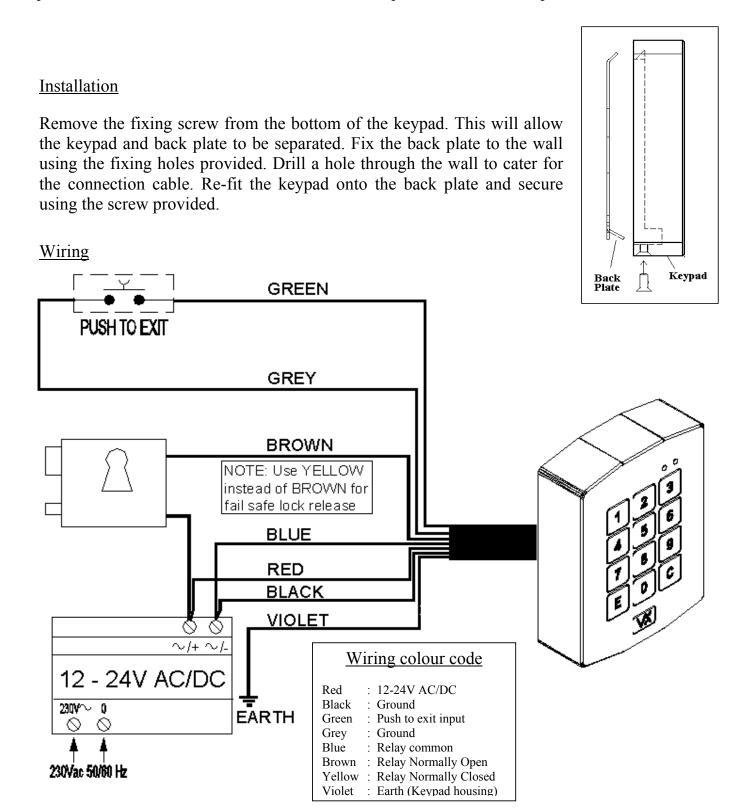

Programming POWER UP USING User Nr. NAME 12V-24V AC/DC 1 8 x 1 (11111111) for factory default or 2 ENTER MASTER previously programmed master code CODE" **Red LED will illuminate** 3 Press "E" 4 Enter a new master code or the ENTER NEW 5 "MASTER CODE" same code again (4 - 8 digits)6 Press "E" Melody 7 **ENTER** Single digit from 1 to 9 8 "USER NUMBER" 9 Press "E" Melody Press the "C" button **ENTER** to cancel the user code From 4 - 8 digits long "USER CODE" Press "E" Melody MORE CODES

<u>Programming Notes</u>

- \circ The access codes can be from 4 8 digits long
- o Up to 9 access codes can be added to the codelock
- \circ The relay time can be from 01 99 seconds or latching (00)
- The master code cannot activate the relay, it is only used to access the programming menu. (The master code must be different to any of the relay codes).

REQUIRED?

ENTER

"RELAY TIME"

SYSTEM READY TO USE

Press "E" Twice \downarrow No Melody

Yes

Melody

2 digits (01-99) seconds

I.E. 05 = 5 seconds

The Red LED will go off

00 = Latch relav

o It is good practice to keep a record of the user number and the name of the person/group who are using that code for future modification of codes/users.

Operation

- To activate the relay simply type in the relevant code followed by 'E'. If the code is correct the relay will activate and the green LED will illuminate, if the code is incorrect a short melody will play (The melody will increase in length the more times an incorrect code is used consecutively).
- o If a mistake is made when entering the code simply press 'C' and start again.

Press "E"

- o If an access code is started and then left, the codelock will reset after 10 seconds (A beep will be heard from the codelock)
- To deactivate the relay when the relay time is set to latch (Relay time = '00') simply enter the code and press 'C'.

22PSVer1.0