

URMET 5150/500



Terminals

1A	Speech Line
-	- 6V DC
+	+ 6V DC
2	Speech Line
1	Use instead of 1A for 1130 handsets

urmet
DOMUS

www.intercomsrus.com


Mod.
5150

DS 823-003B

LBT 7114

AMPLIFIED OUTDOOR SET WITH "ELECTRET" MICROPHONE

Sch. /Ref. 5150/500

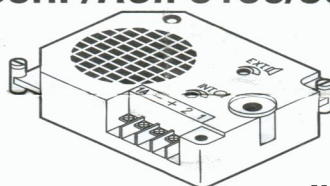


ENGLISH


The outdoor set Ref. 5150/500 uses two different integrated circuits to effect amplification both **outwards and inwards** and an electret microphone as transmitting unit.

The outdoor set Ref. 5150/500 is provided with two potentiometers for volumes adjustment.

In order to adjust the external volume:

- Turn the potentiometer **EXT.**  clockwise to increase volume, counterclockwise to decrease it.

In order to adjust the internal volume:

- Turn the potentiometer **INT.**  clockwise to increase volume, counterclockwise to decrease it.

For its best use, the outdoor set has to be fixed inside the push button panel so that the microphone is behind the protection grid and is not covered by the front panel.

In installations with house phones Mod. 1130, use the terminal 1 instead of the terminal 1A.

www.intercomsrus.com

www.intercomsrus.com

IMPORTANT NOTE :

1) Before replacing the speech unit make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

Wiring Diagram

