

Golmar T-700




Terminals

- P1 Lock
- 5 Speech Out (Mic)
- 3 Common
- 10 Speech In (Speaker)
- 0 Call

IMPORTANT NOTE :

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

Wiring Diagram

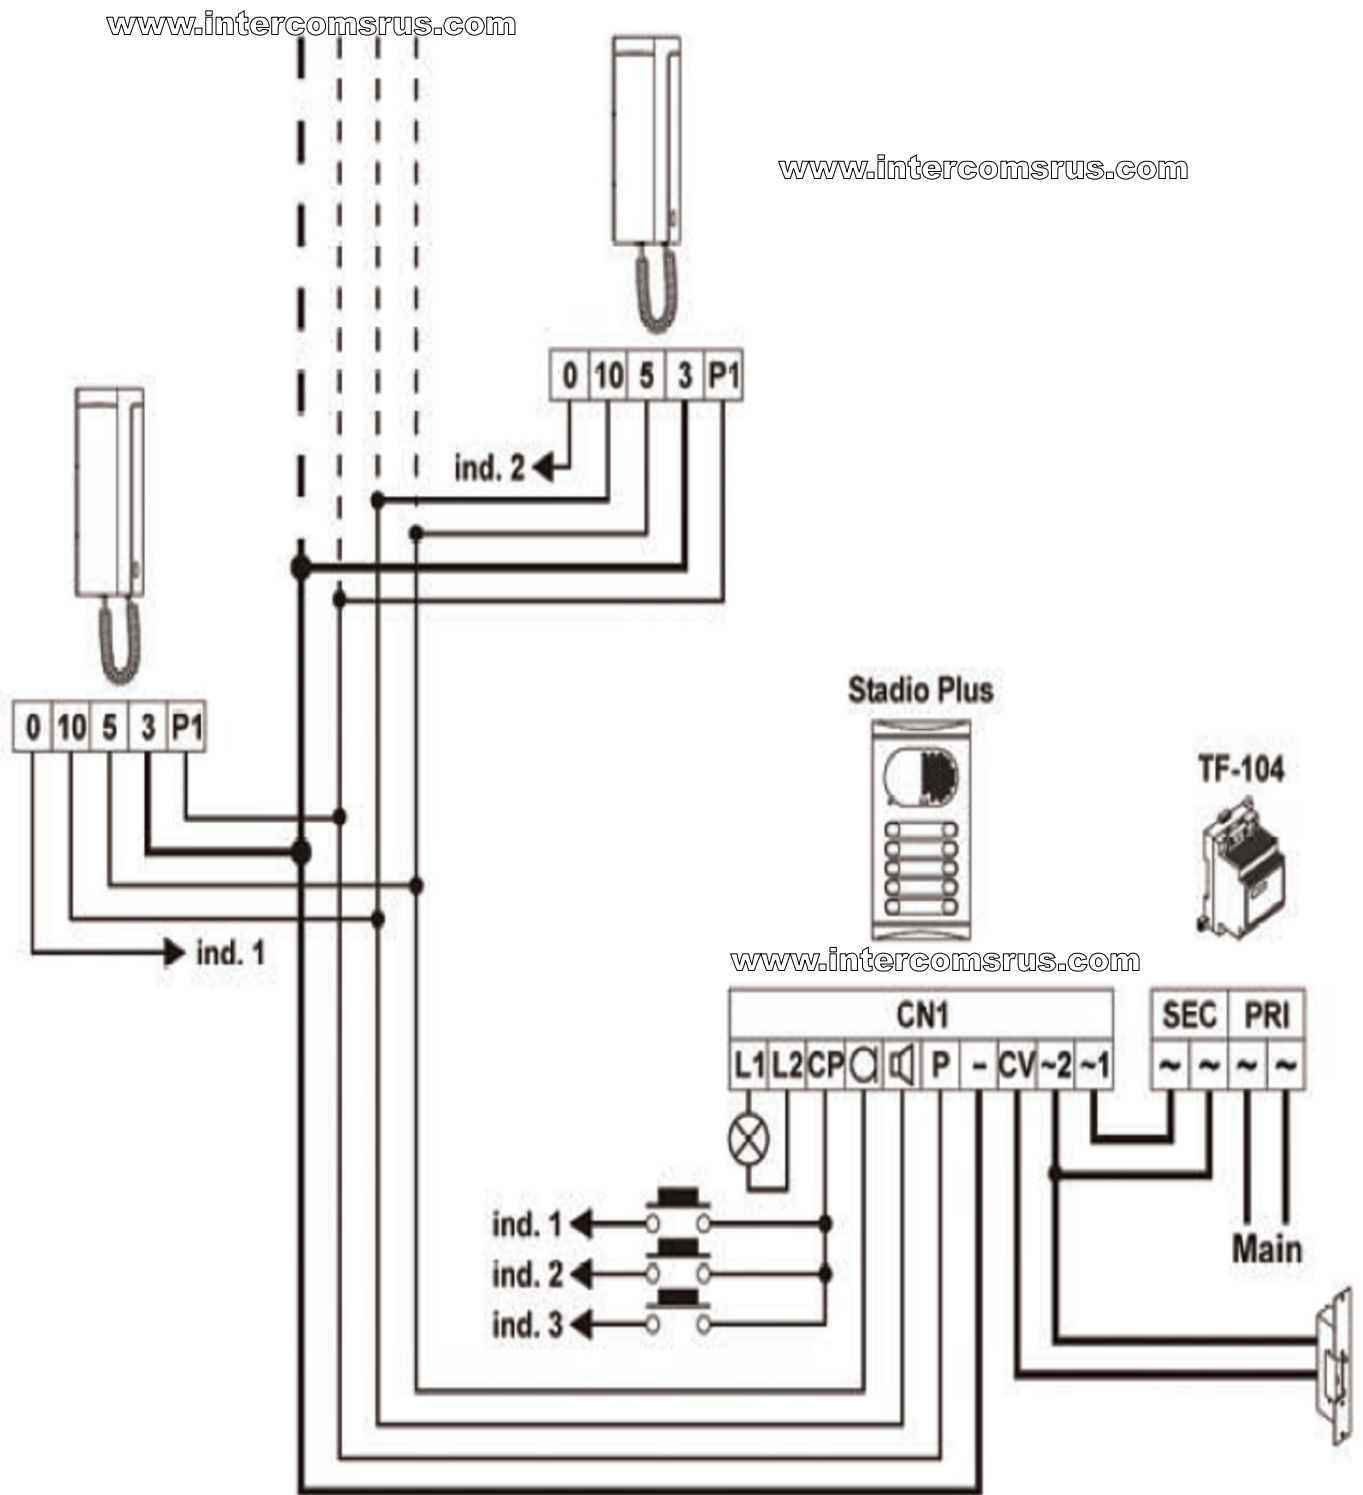

www.intercomsrus.com

www.intercomsrus.com

www.intercomsrus.com

www.intercomsrus.com