

Fermax 8091 ECOKIT Handset



Terminals

~ Power In

≈ Power In

1

2

3

6

4

IMPORTANT NOTE :

1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).


Wiring Diagram

FERMAX
94580 - V11/00.

TELÉFONO ECOKIT ADICIONAL ADDITIONAL ECOKIT TELEPHONE

www.intercomsrus.com

www.intercomsrus.com

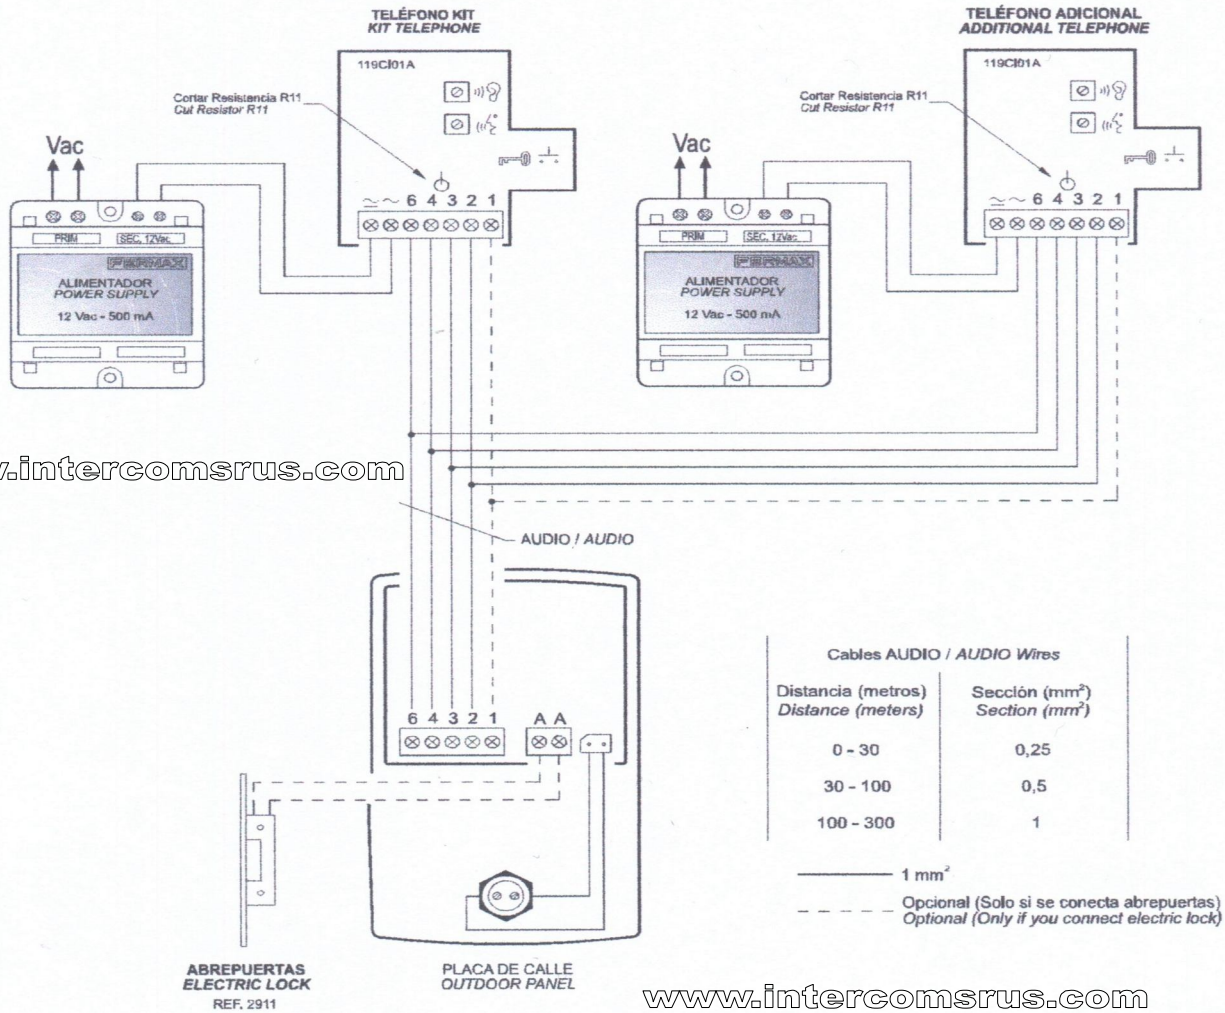

www.intercomsrus.com

Es posible alimentar los dos teléfonos con un único alimentador Ref. 8787 o cualquier otro de 12 Vac / 1 A (min).

It is possible to supply both telephones with a single power supply Ref. 8787 or any other of 12 Vac / 1 A (min).