

RITTO Automatik



Terminals


1 / 2 2 Wire Connection

IMPORTANT NOTE :

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

WIRING DIAGRAM


1 Way Kit Wiring.

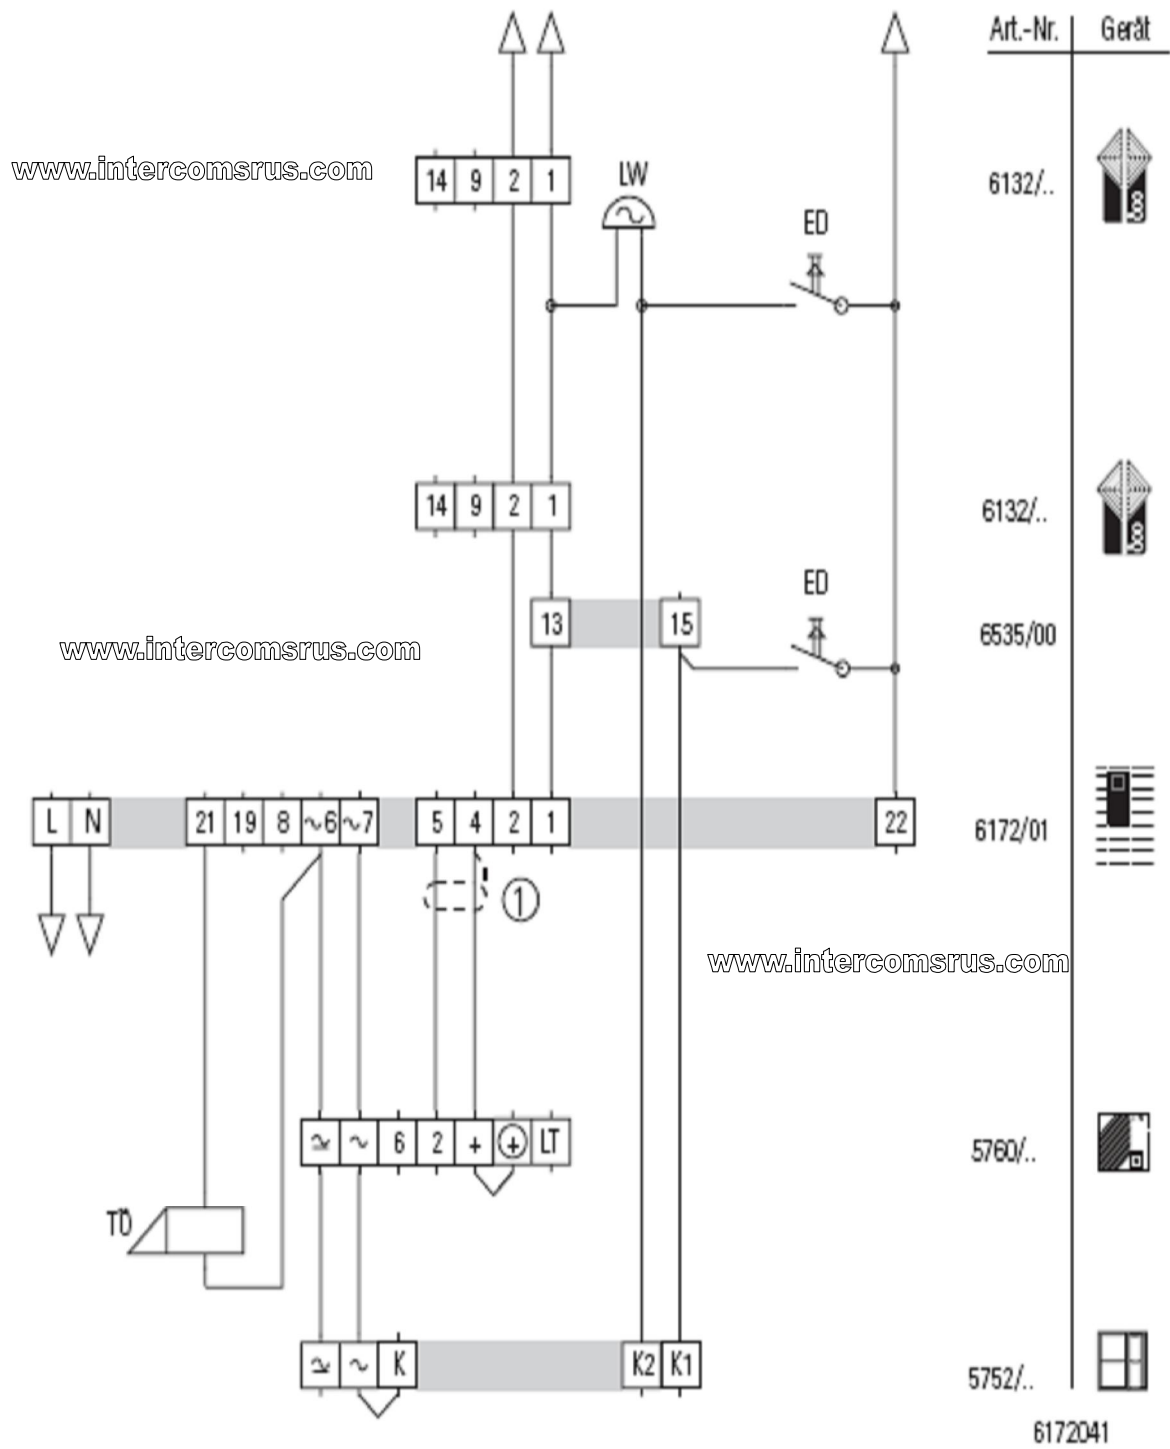

WIRING DIAGRAM

2 Entrance Wiring Diagram

www.intercomsrus.com

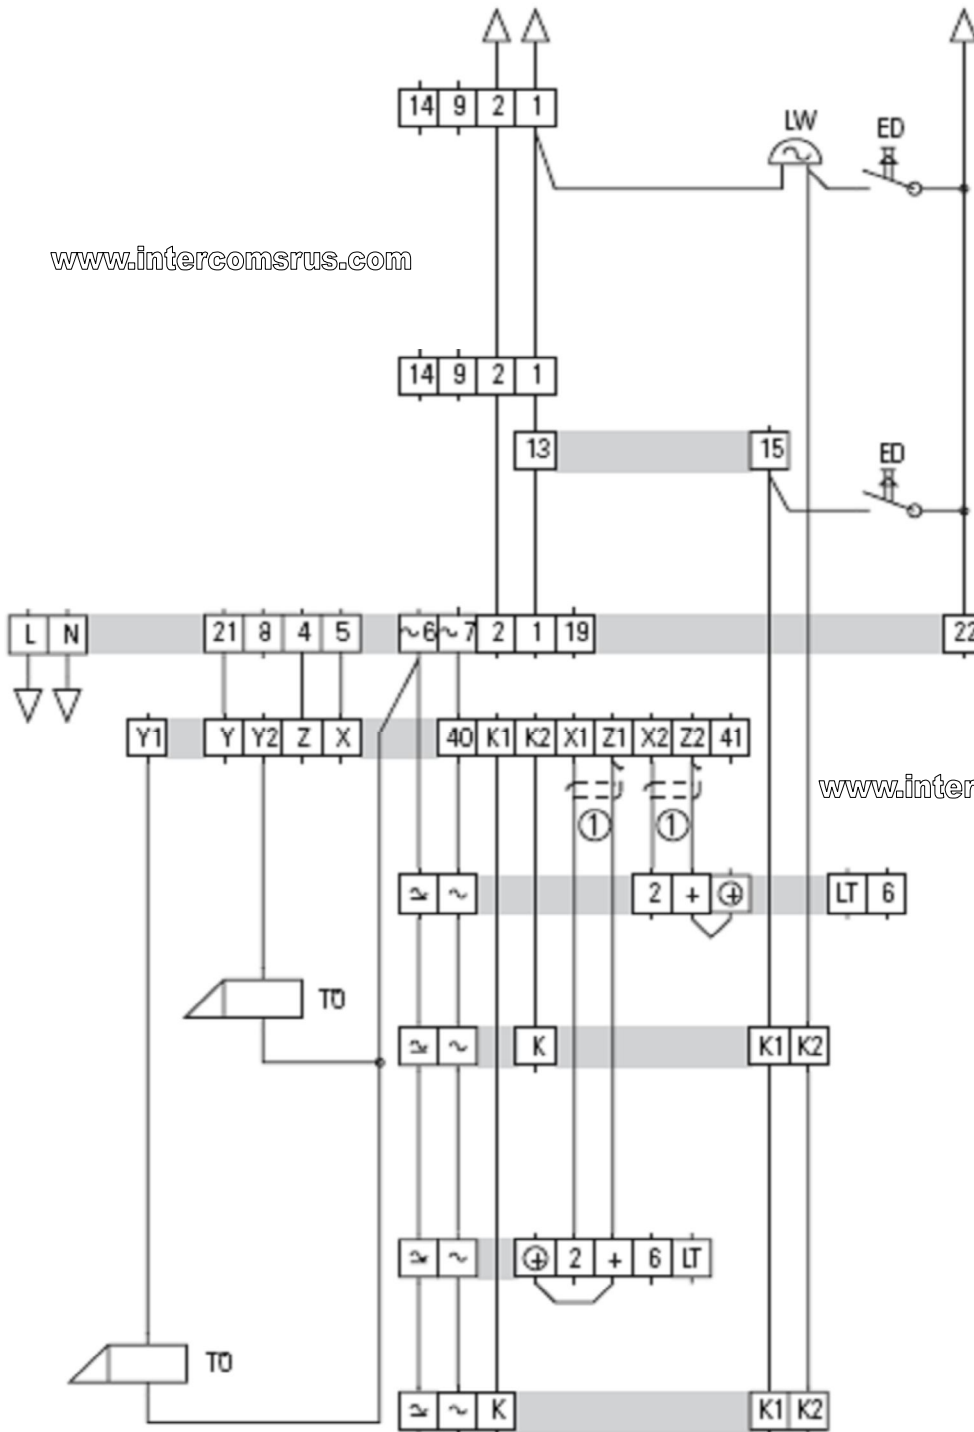

www.intercomsrus.com

Art.-Nr.	Gerät
6132/..	
6132/..	
6535/00	
6172/01	
6982/..	
5760/..	
5752/..	
5760/..	
5752/..	

www.intercomsrus.com