


Consilium Aquarius

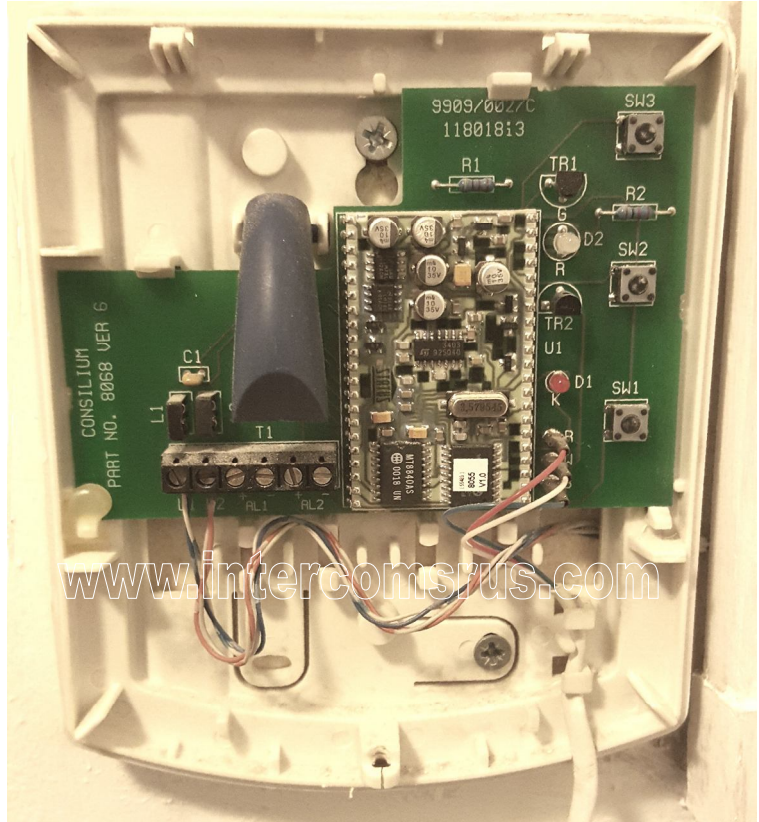

Terminals

- L1 Bus
- L2 Bus
- AL1 +
- AL1 -
- AL2 +
- AL2 -

IMPORTANT NOTE :

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).



intercoms

WWW.INTERCOMSRUS.COM