

# Acet 702 (2 Wire)



## Terminals

- 1 & 2 Volt Free Button
- 3
- 5 Common
- 6 Input From Panel
- 7

**Note :** There are 2 versions of this handset, they look exactly the same externally.  
2 wire (702) Has two diodes (pcb top left)  
5 wire (701) NO diodes

### IMPORTANT NOTE :


1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

# WIRING DIAGRAM

## Acet 702 (2 Wire)

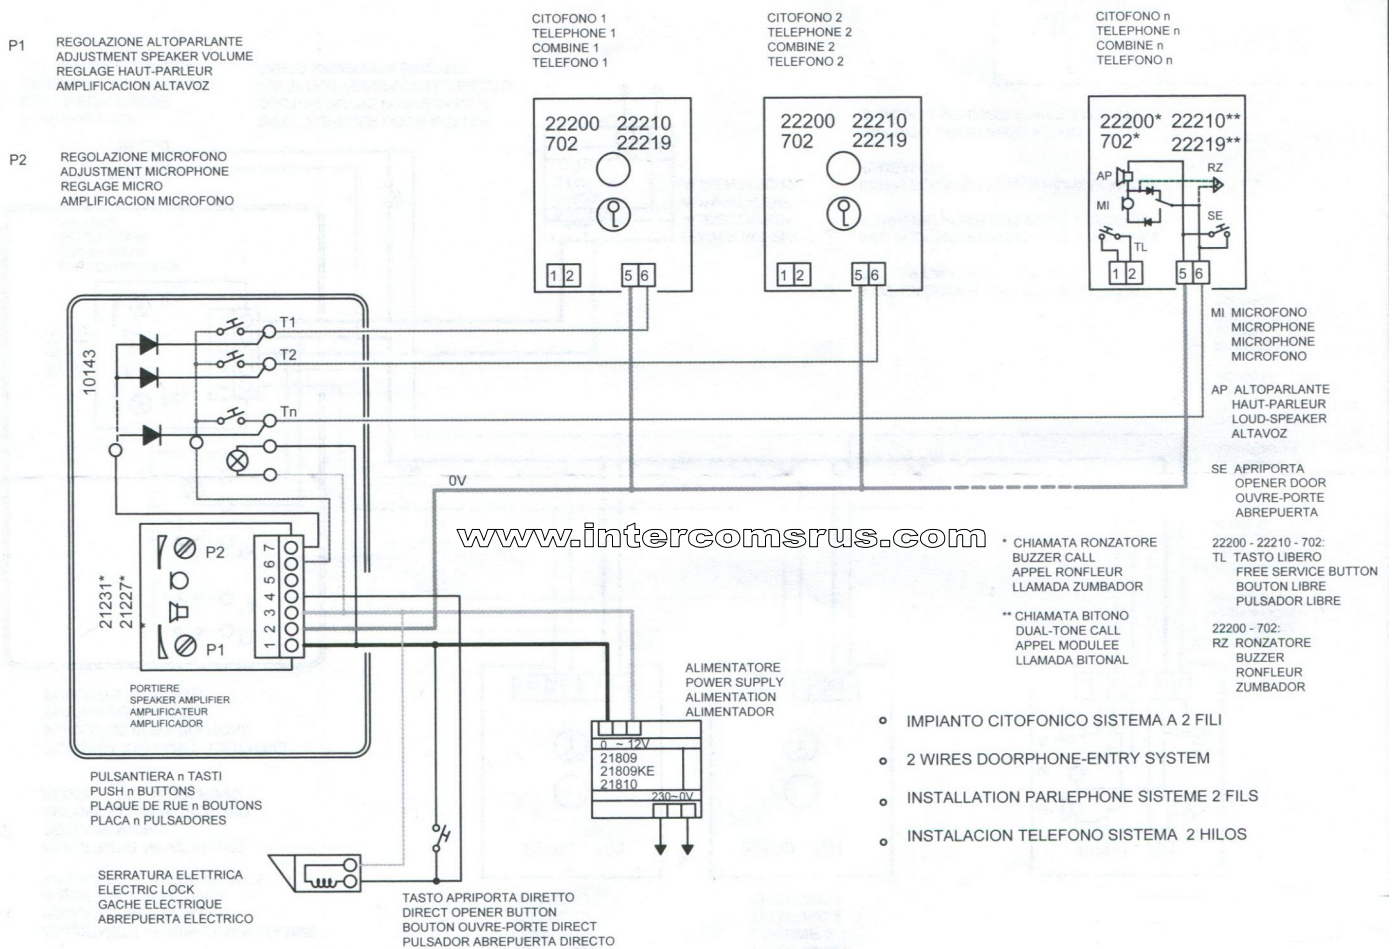

**Notes :**